

1. Product Name

- ✧ TFT LCD display
- ✧ Model : APT TFT 850C

2. Suppliers

- ✧ Tianjin APT Science and Technology Co., Ltd.
-

3. Electrical Parameters

- ✧ 3.2inch IPS screen
- ✧ 24V/36V/48V battery supply
- ✧ Rated operating current : 40mA
- ✧ Max operating current : 100mA (36V battery, with USB equipment changed)
- ✧ USB changing port : 5V 500mA
- ✧ Off leakage current < 1uA
- ✧ Max output current to controller : 100mA
- ✧ Operating temperature : -20~70℃, Storage temperature : -30~80℃

4. Dimensions & Material

- ✧ Product shell is ABS, transparent window is made with high strength Acrylic.
- ✧ Dimensions : host/L92mm*W60mm*H14mm




5. Features

- ✧ Suitable for low temperature, Max -20℃.
- ✧ High-contrast 3.2inch IPS colorful matrix screen.
- ✧ Ergonomic external button design, easy to operate.
- ✧ **Speed display** : AVG SPEED, MAX SPEED, SPEED(Real-time).
- ✧ **Kilometer / Mile** : Can be set according to customers' habits.
- ✧ **Smart battery indicator** : Provide a reliable battery indicator.
- ✧ **9-level Assist** : 3-level/5-level/9-level optional.
- ✧ **Mileage indicator** : Odometer/Trip distance/ Clock/ Riding time.
- ✧ **Power indicator** : real time power indicator, digital or analog.
- ✧ **Battery information** (needs to be supported by battery communication)
- ✧ **DST indicator** (needs to be supported by battery communication)
- ✧ **Self-Testing**
- ✧ **Speed limit value indicator**
- ✧ **Error code indicator.**
- ✧ **Light sensor (Optional)**
- ✧ **Software upgraded** : Software can be upgraded through UART.
- ✧ **USB charging port** : 5V/500mA

6. TFT screen instructions



7. Functional Description

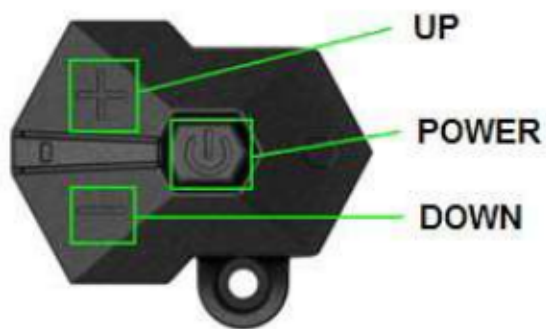

7.1 Power On/Off

Press and hold **Power** button for 1 second can turn on/off the display. The Display can automatically shut down when there is no operate & ride for X minutes (X could be 0~9) .

*If the display has been set password power on, you need to input the right password before start.


7.2 Assist level operating

Short press **UP/DOWN** button can change the assist level. Top assist level is 9, 0 for neutral. Level quantities can be adjusted according to the customer requirements.



7.3 Speed & Mileage mode switch

Short press **POWER** button can change the speed and mileage mode, **TRIP**→**ODO**→**RANGE**→**TRIP**→**TIME**→**MAX SPEED**→**AVG SPEED**

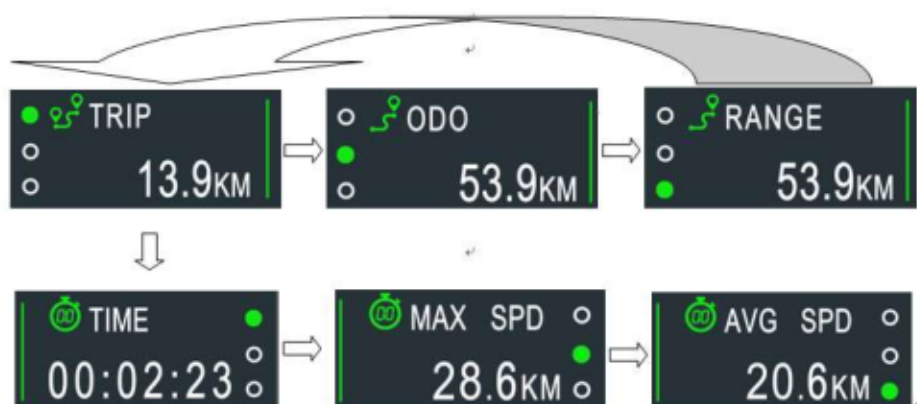

**If there is no operation for 5 seconds, display will return Speed (Real-Time) display automatically.

7.4 Headlight/backlight On/Off

Press and hold **UP** button for 1 second can turn on/off the headlight, and the screen will switch to the corresponding mode.

*The motor does not work when the battery voltage is low, Display still can keep the headlight on for a while when E-bike is in riding.



7.5 Walking mode (6km)

Press and hold **DOWN** button for 2 second can get into walking mode, out of the mode when release the button.



* This feature needs to be supported by controller.

7.6 Data cleanup

Press and hold **UP** & **DOWN** buttons together for 1 second can reset several temporary data, temporary data include **AVG Speed / MAX Speed / Trip / Time**.

* These temporary data can't be erased by power off.

8. Parameter setting


Double press **POWER** button (press interval less than 0.3 second) can get into setting menus, press **UP/DOWN** buttons to change the parameter setting, press **POWER** button can switch to next item. Double press **POWER** button will exit from menu.

* Display will automatically quit menu when there is no operation for 30 seconds.

* For safety reasons, display can't get into MENU when riding.

* Display will quit MENU when start riding.

The order of parameters are as follow.

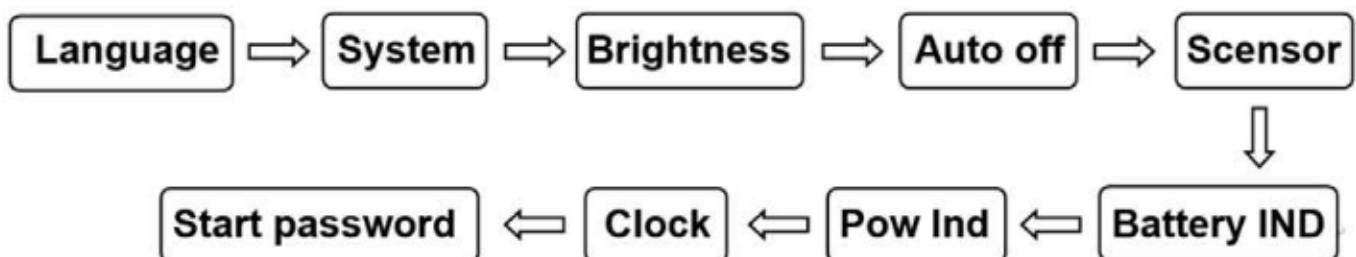


8.1 Language: Default EN, Unadjustable

MENU	
Display Setting	
→ Language	EN
System	Metric
Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

8.2 System : Press Up / Down button to switch between Metric / Imperial.


MENU	MENU
Display Setting	
Language	EN
→ System	Metric
Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	



MENU	MENU
Display Setting	
Language	EN
→ System	Imperial
Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

8.3 Brightness : Press Up / Down button to change the brightness of the backlight, | is darkness, ||||| is brightness


MENU	MENU
Display Setting	
Language	EN
System	Imperial
→ Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	




MENU	MENU
Display Setting	
Language	EN
System	Imperial
→ Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

8.4 Auto off : Press UP/DOWN button to change the auto power off time, from 1 to 9, the number represent time (minutes) to shutdown, default value is 5 minutes.

MENU	MENU	MENU
Display Setting		
Language	EN	EN
System	Imperial	Imperial
Brightness		
→ Auto off	1 min	9 min
Scenes	Analog	Analog
Battery Ind	Percent	Percent
Pow Ind	Current	Current
Clock	>	>
Start Password	>	>
Basic Setting		
...		
EXIT		



MENU	MENU	MENU
Display Setting		
Language	EN	EN
System	Imperial	Imperial
Brightness		
→ Auto off	9 min	OFF
Scenes	Analog	Analog
Battery Ind	Percent	Percent
Pow Ind	Current	Current
Clock	>	>
Start Password	>	>
Basic Setting		
...		
EXIT		



MENU	MENU	MENU
Display Setting		
Language	EN	EN
System	Imperial	Imperial
Brightness		
→ Auto off	OFF	OFF
Scenes	Analog	Analog
Battery Ind	Percent	Percent
Pow Ind	Current	Current
Clock	>	>
Start Password	>	>
Basic Setting		
...		
EXIT		

8.5 Scenes : Press UP/DOWN button to change the scenes, Digital / Analog (default) .

MENU		MENU	
Display Setting		Display Setting	
Language	EN	Language	EN
System	Imperial	System	Imperial
Brightness		Brightness	
Auto off	OFF	Auto off	OFF
→ Scenes	Analog	→ Scenes	Digital
Battery Ind	Voltage	Battery Ind	Voltage
Pow Ind	Power	Pow Ind	Power
Clock	>	Clock	>
Start Password	>	Start Password	>
Basic Setting		Basic Setting	
...		...	
EXIT		EXIT	

8.6 Battery Ind : Press UP/DOWN button to change the battery indicator, Voltage / Percentage / OFF.

*Accurate percentage needs communication with battery.



Voltage

Percentage

OFF

8.7 Pow Ind : Press UP/DOWN button to change the Power indicator, [Power / Current](#).


* This data represent power output of the battery (not motor).




8.8 Clock : Clock setting, press POWER button get into the clock setting menu, press UP/DOWN button to set Year/Month/Day/Hour/Min/Sec.




8.9 Start password : Press POWER button get into the password setting menu. If you had set Start input ON, you must input right password before power on, password is accorded to your setting.

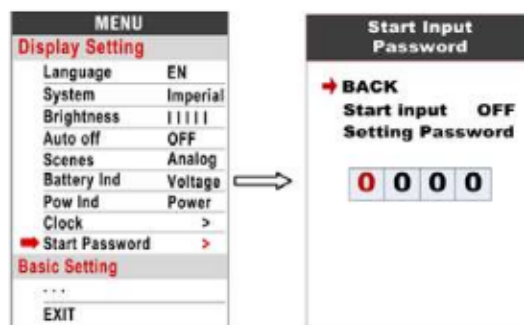


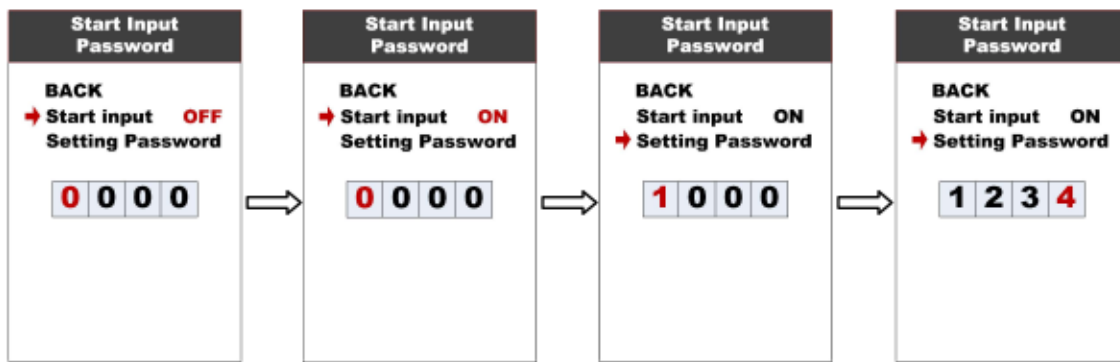

You need to input the right password before start with 30 seconds, display will power off automatically if the password was wrong.

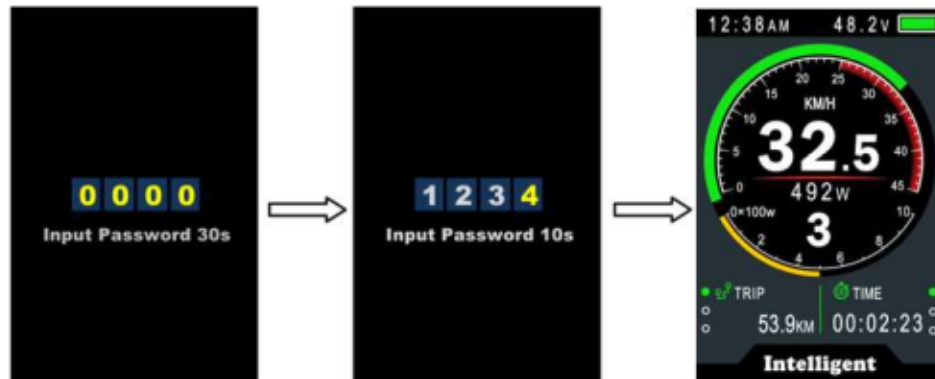


Basic Setting

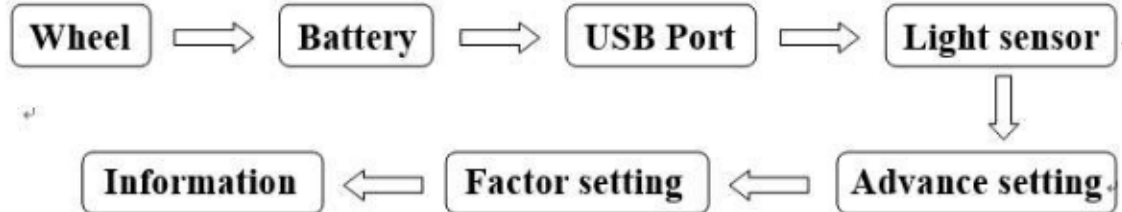


*Press DOWN button to move the red arrow to ^{Wheel} ..., press POWER button can show all items of the Basic Setting.


8.10 Wheel : Press UP/DOWN can change the wheel setting, optional wheel diameter is 16/18/20/22/24/26/27/27.5/28/29 inch.

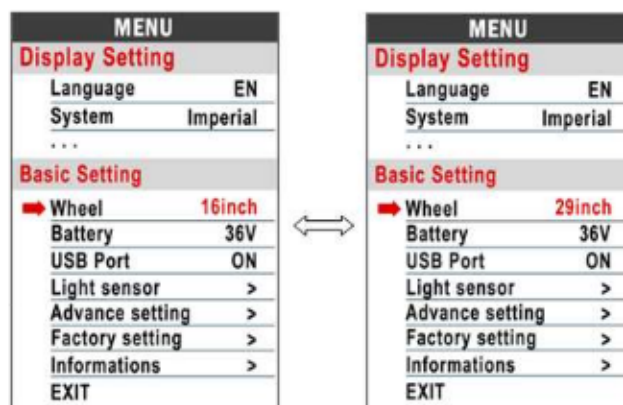

8.11 Battery : Press UP/DOWN will change battery voltage setting, optional value is 24V/36V/48V/UBE, UBE means user define value.

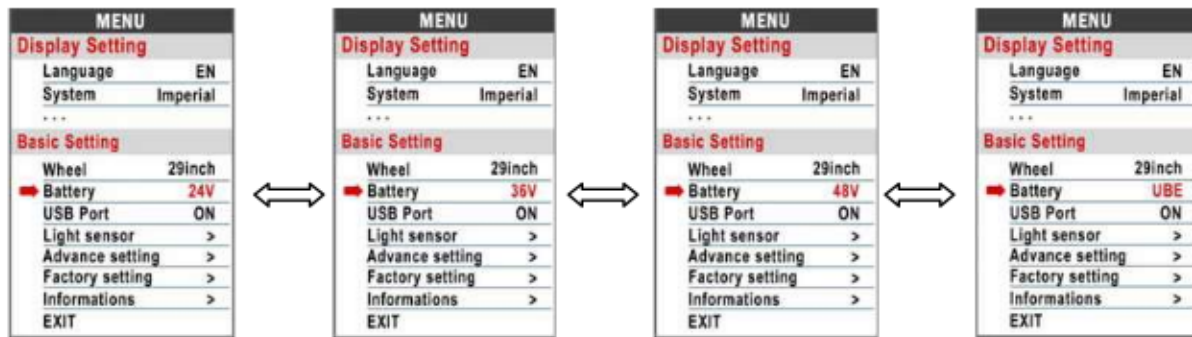



8.12 USB Port: press UP/DOWN level, select press OFF/ON, Will be no Voltage/Current output after switching off.

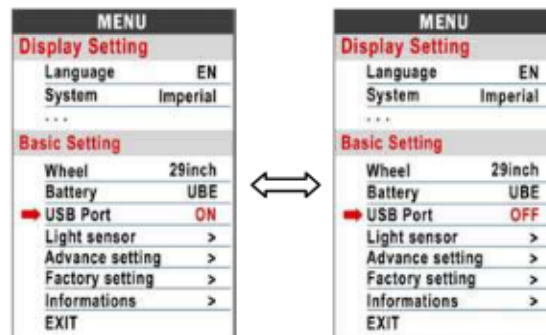


8.13 Light sensor: Light sensor item, press switch Button, enter into Light sensor interface, Press UP/DOWN button select OFF/ON; select Sensitivity, press UP/Down Select sensitivity of light sensation HI/MID/LO




8.14 Advance setting : Press POWER button can get into the advance setting menu, default password is '1919'.

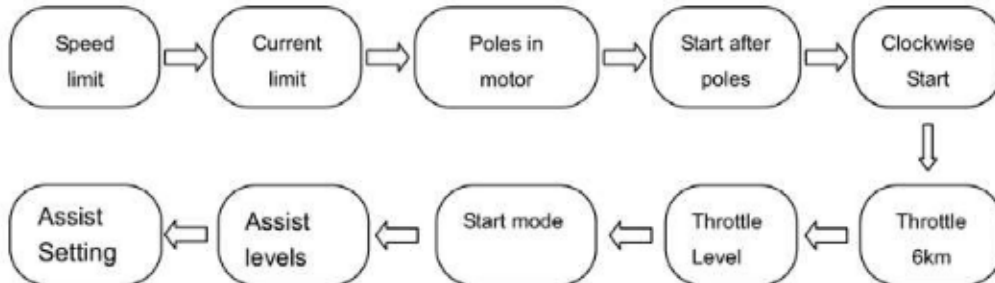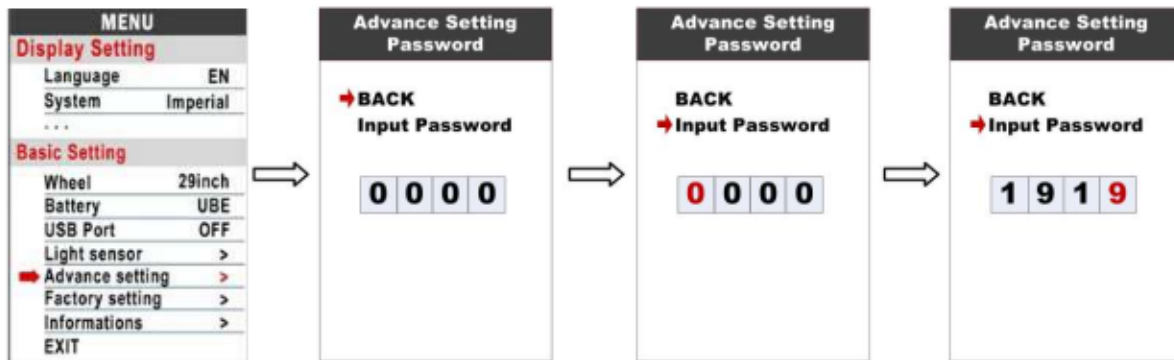

8.15 Speed limit : Press UP/DOWN will change speed limit, range 10km/h~41km/h. Default value is 25km/h.

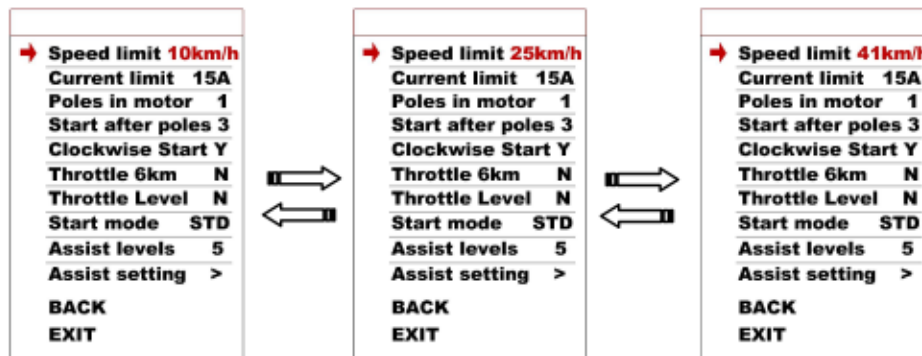


8.16 Current limit : Press UP/DOWN will change current limit, range 6A~50A. Default value is 15A.

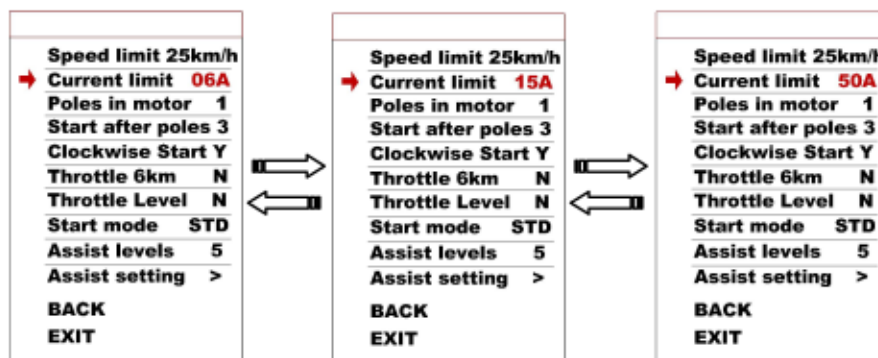


*Speed limit and current limit are restricted by controller and motor.


8.17 Poles in motor : Magnetic poles inside the motor, press UP/DOWN will change pole number, range 1~6. Default value is 1.

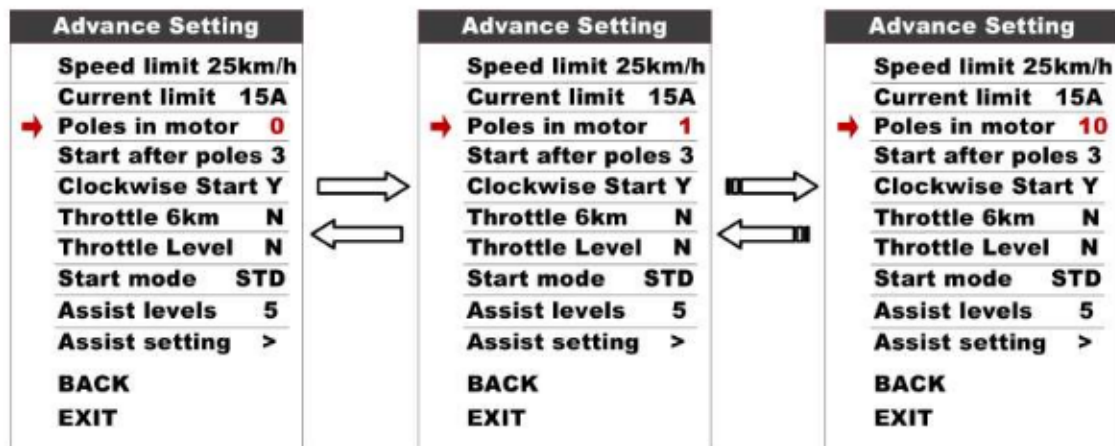

8.18 Start after poles : How many poles (speed sensor) need to be detected by controller before starting motor. Default value is 3.

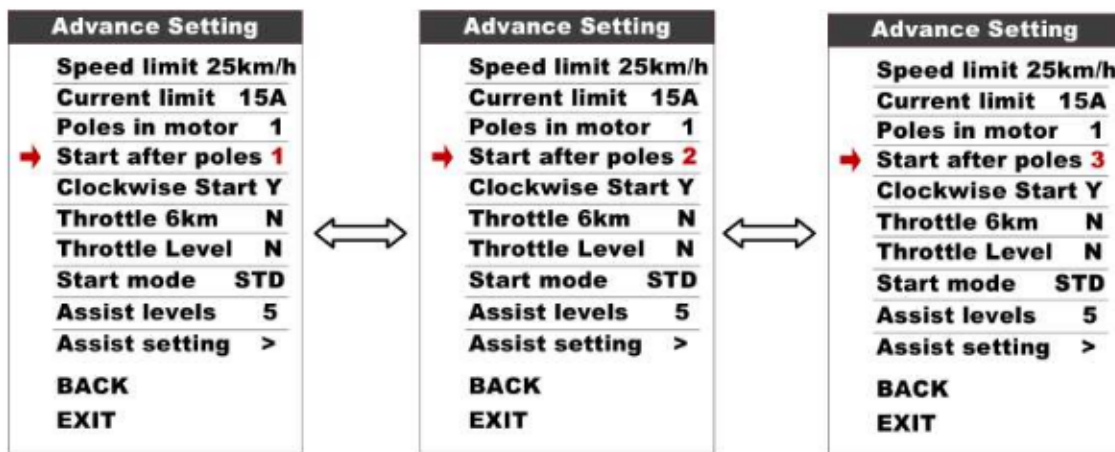

8.19 Clockwise start : This parameter represent speed sensor turn direction, default value is Y (forward).

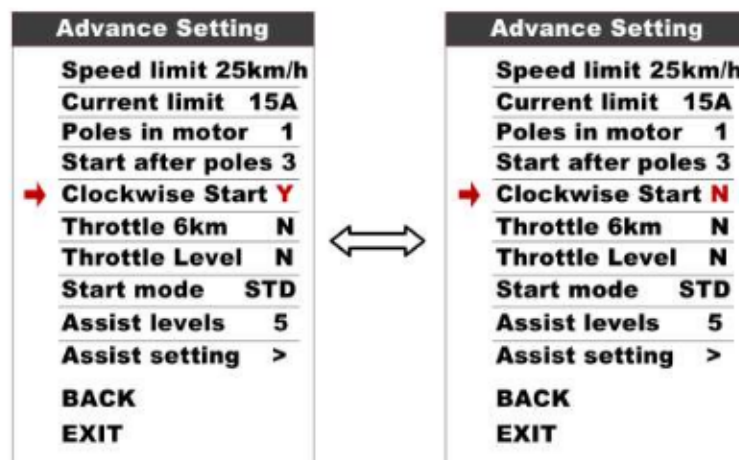

8.20 Throttle 6KM : this parameter can set the throttle function, N represent max speed, Y represent 6Km.

Advance Setting		Advance Setting
Speed limit 25km/h		Speed limit 25km/h
Current limit 15A		Current limit 15A
Poles in motor 1		Poles in motor 1
Start after poles 3		Start after poles 3
Clockwise Start Y		Clockwise Start Y
→ Throttle 6km N	↔	→ Throttle 6km Y
Throttle Level N		Throttle Level N
Start mode STD		Start mode STD
Assist levels 5		Assist levels 5
Assist setting >		Assist setting >
BACK		BACK
EXIT		EXIT

8.21 Throttle Level : This parameter is functional when Throttle 6KM set N, Press UP/DOWN will change Y/N, N represent Throttle start max speed, Y represent throttle's speed is accorded to the assist level.


Advance Setting		Advance Setting
Speed limit 25km/h		Speed limit 25km/h
Current limit 15A		Current limit 15A
Poles in motor 1		Poles in motor 1
Start after poles 3		Start after poles 3
Clockwise Start Y		Clockwise Start Y
Throttle 6km N		Throttle 6km N
→ Throttle Level N	↔	→ Throttle Level Y
Start mode STD		Start mode STD
Assist levels 5		Assist levels 5
Assist setting >		Assist setting >
BACK		BACK
EXIT		EXIT

8.22 Start mode : Pow/ECO/STD(default) represent Power/ECO/Standard, Power mode means use maximum current when speed up, ECO mode means use minimum current.


*This function is optional, may not supported by each mode.

Advance Setting		Advance Setting		Advance Setting
Speed limit 25km/h		Speed limit 25km/h		Speed limit 25km/h
Current limit 15A		Current limit 15A		Current limit 15A
Poles in motor 1		Poles in motor 1		Poles in motor 1
Start after poles 3		Start after poles 3		Start after poles 3
Clockwise Start Y		Clockwise Start Y		Clockwise Start Y
Throttle 6km N		Throttle 6km N		Throttle 6km N
Throttle Level N		Throttle Level N		Throttle Level N
→ Start mode Pow	↔	→ Start mode ECO	↔	→ Start mode STD
Assist levels 5		Assist levels 5		Assist levels 5
Assist setting >		Assist setting >		Assist setting >
BACK		BACK		BACK
EXIT		EXIT		EXIT


8.23 Assist levels : This parameter can customize assist levels, options are 3/5/9/UBE, UBE represent factory default settings.

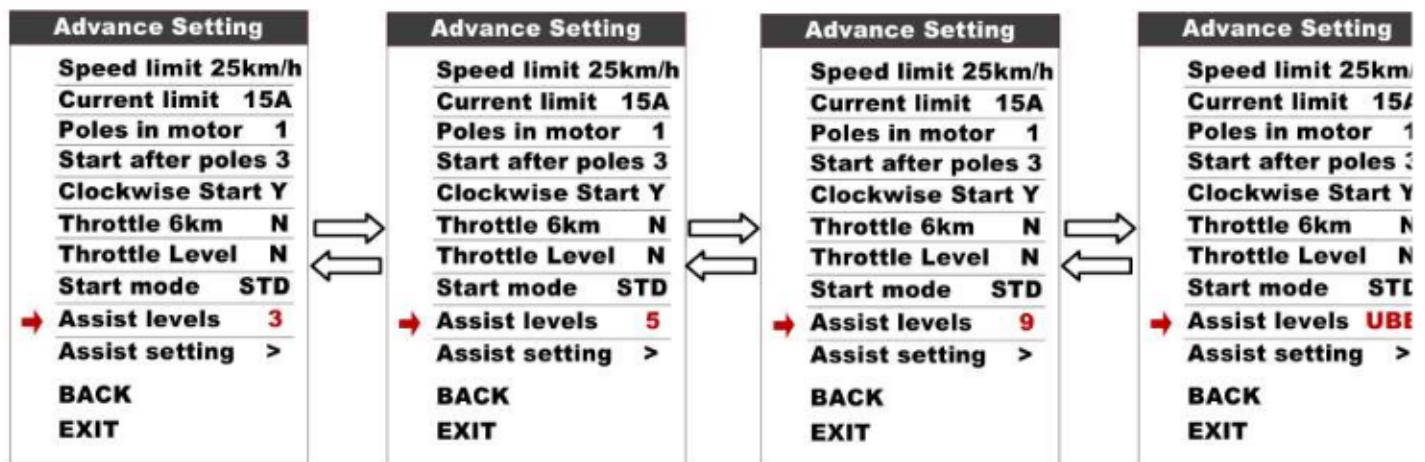

8.25 Factory setting : Press POWER button enter Restore Factory settings item, set YES will restore all parameter to factory settings.

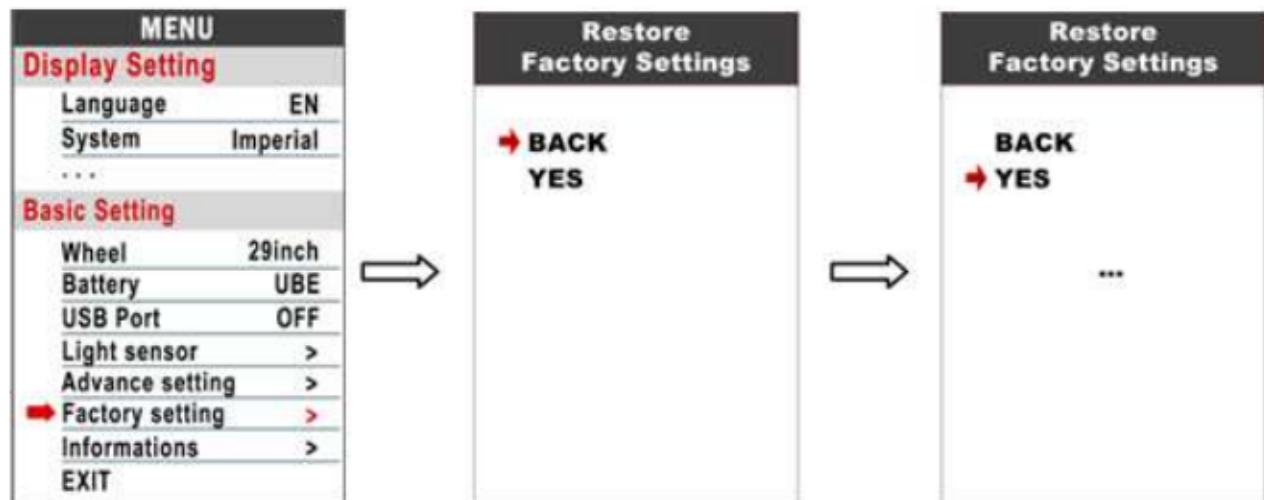


8.26 Information : Show information of the E-bike.

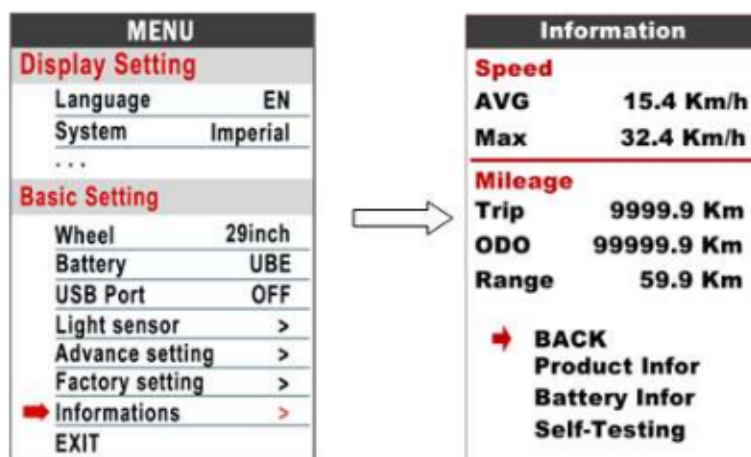


8.29. Self-Testing: Get into this item can Self-testing, and show testing information of the BIKE, including Controller→ PAS sensor→ Speed sensor→ Throttle→ Motor hall sensor→ Brake sensor. Follow the prompts requires the operator.

*-- This indicates ignore detection, NG test will not pass.

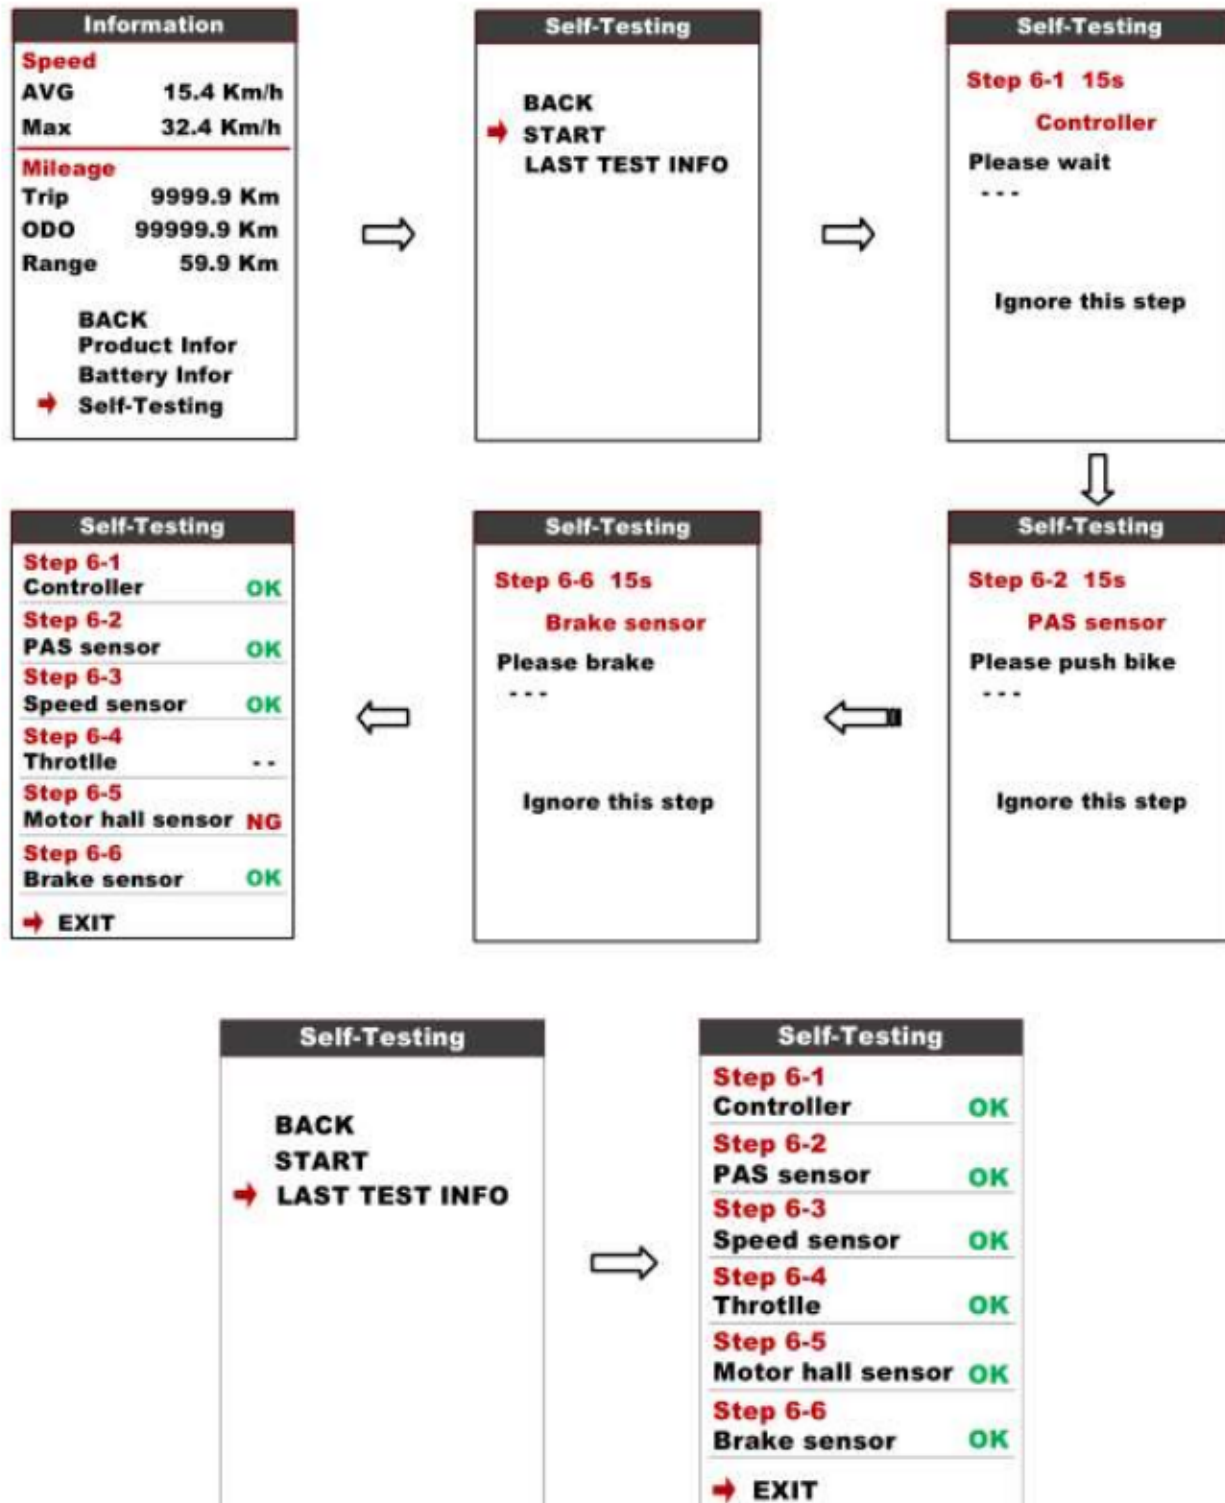

9. Error Code define


850C can show warning message,  icon shows on the screen, and show error code at the bottom of the screen, error code from 01~25, definition see the table below.

Error Code	Error description	Handle
01	Communication Error	Check the cable connection
21	Current protection	Check controller.
22	Throttle error	Check turn to connect.
23	three-phase power error	Check three-phase power line connection
24	Hall error	Check the hall connection
25	Brake error	Check the brake connection.
26-99	Reserved	Please contact the manufacturer for error definitions



10. Assembly instructions

Please pay attention to the screw's torque value, damaged caused by excessive torque is not within the scope of the warranty.

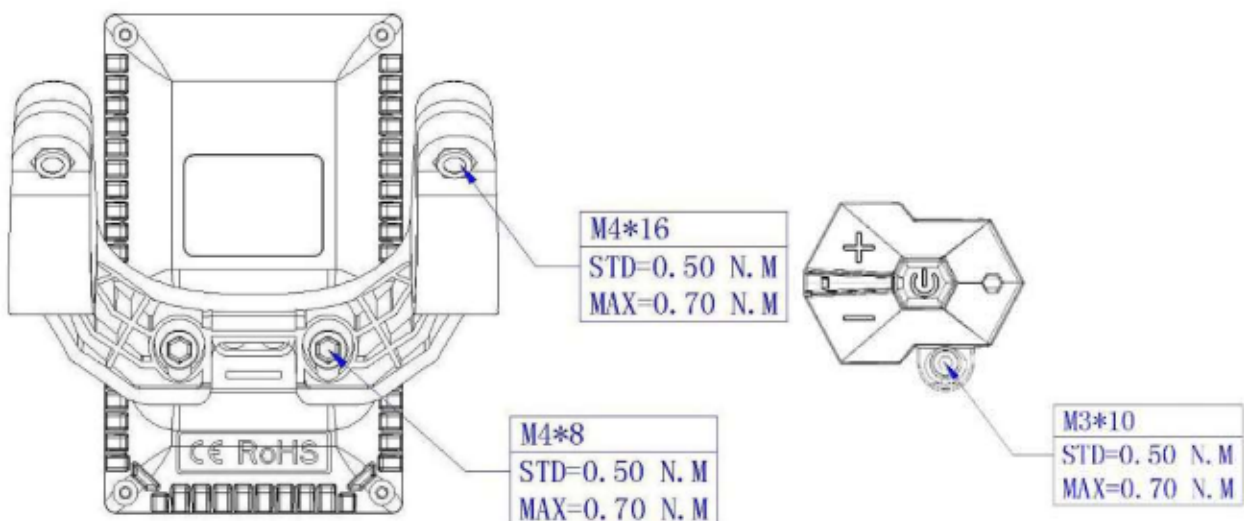


There are 2 directions for the clamp installation, forward or backward.



Clamps suit for 3 size of handlebar, 31.8mm, 25.4mm, 22.2mm, there are transfer rings for 25.4mm and 22.2mm, transfer ring must be assembled with the special directions, pay attention to the green arrow below.



11. Connector descriptions

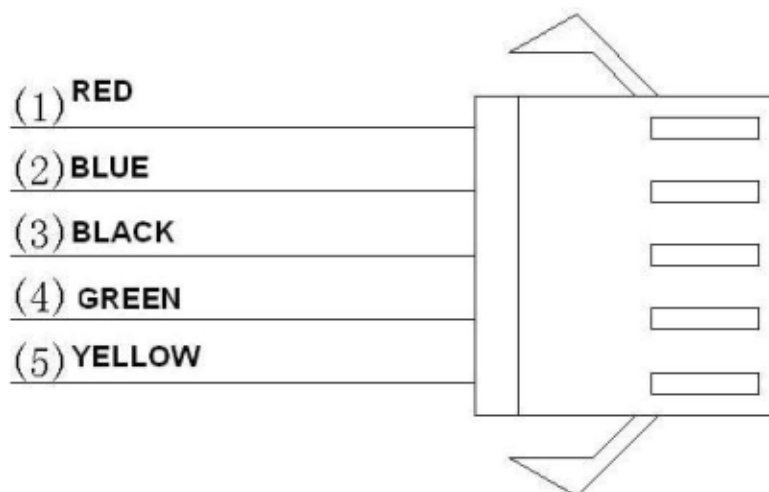

- 1、 Red wire : Anode(24v/36v/48V)
- 2、 Blue wire : Power cord to the controller
- 3、 Black wire : GND
- 4、 Green wire : RxD (controller -> display)

5、 Yellow wire : TxD (display -> controller)

12. Assist level instructions

Assist level can be customized, the highest level is 9, common used assist level see the table below:

3 level	5 level	9 level	
0	0	0	No power assist
	1	1	
		2	
1	2	3	
		4	
	3	5	
2		6	
	4	7	
		8	
3	5	9	

13. Certification

CE / IP65 (water proof) / ROHS.