



FT-750 XP REAR RACK INSTALATION TUTORIAL




On the 2021 XP models, because to the taillights, rear racks are mounted to the **upper** accessory threaded hole on the rear wheel dropout.

The left side has an accessible mount. Accommodations need to be made on the right side to reposition the right taillight from the upper to the lower accessory mount.




Tools needed: (2) 8mm wrenches, 18mm wrench

Included hardware: (2) 5x15mm, (2) 5x10mm, (2) 6mm washers, locknut

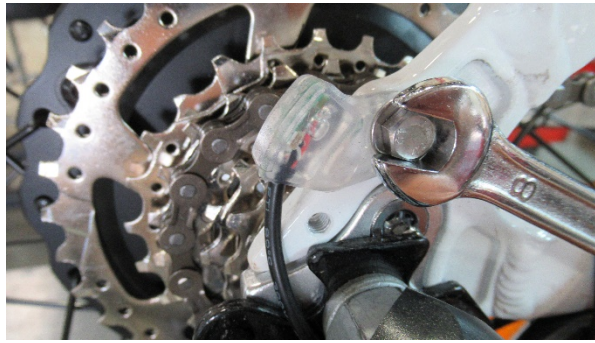



With an 8mm wrench, remove the right-side taillight

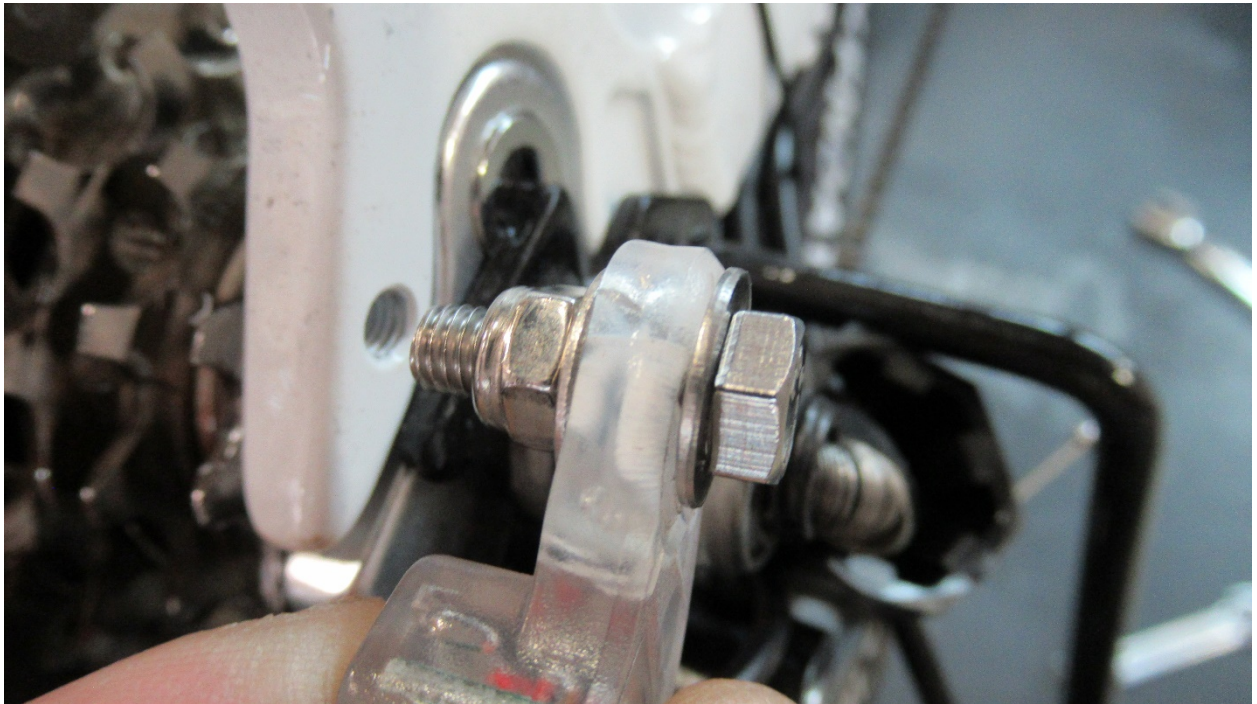

- Assemble the longer 5 x 15mm bolt, the (2) larger 6mm washers and nut, sandwiching the light mounting hole.
- Leave the nut slightly loose so the bolt is free to spin.
- Take caution, the plastic taillight is fragile and will break if over tightened.



Additional clearance will be needed from the derailleur guard to the threaded hole to install the light assembly. With a 18mm wrench, loosen the axle nut and reposition the derailleur guard by turning it counter-clockwise until it stops. Firmly retighten axle nut.

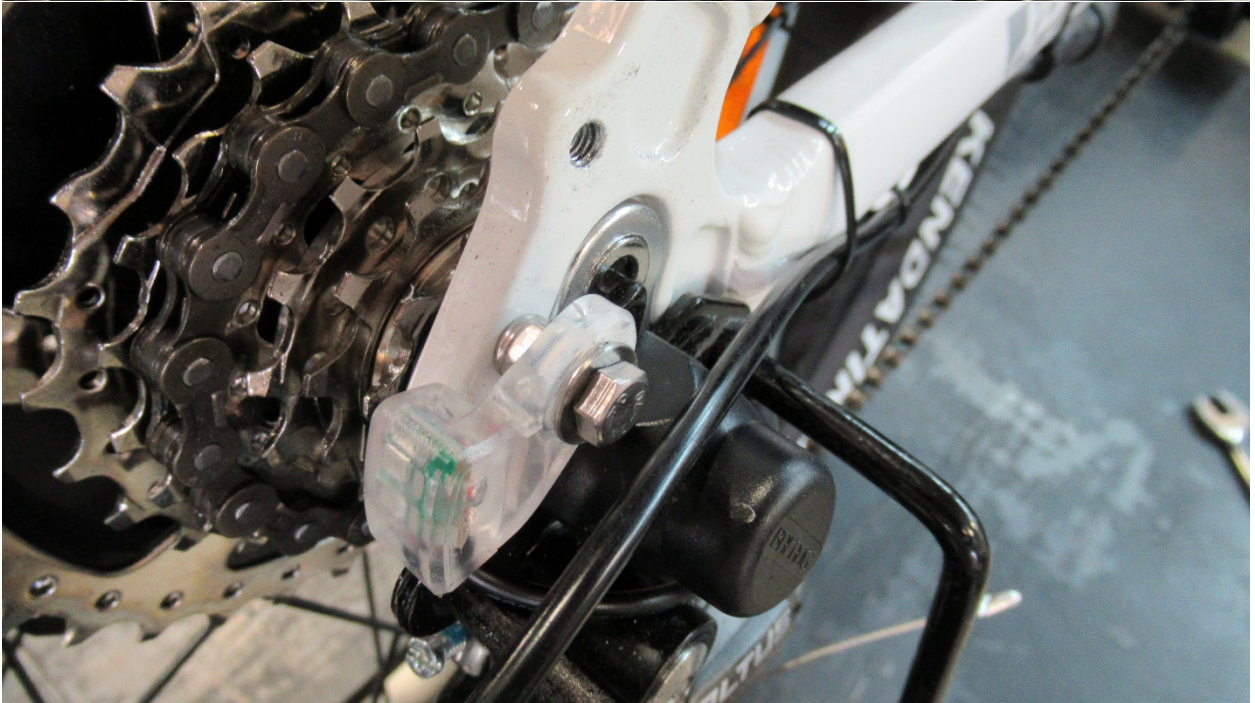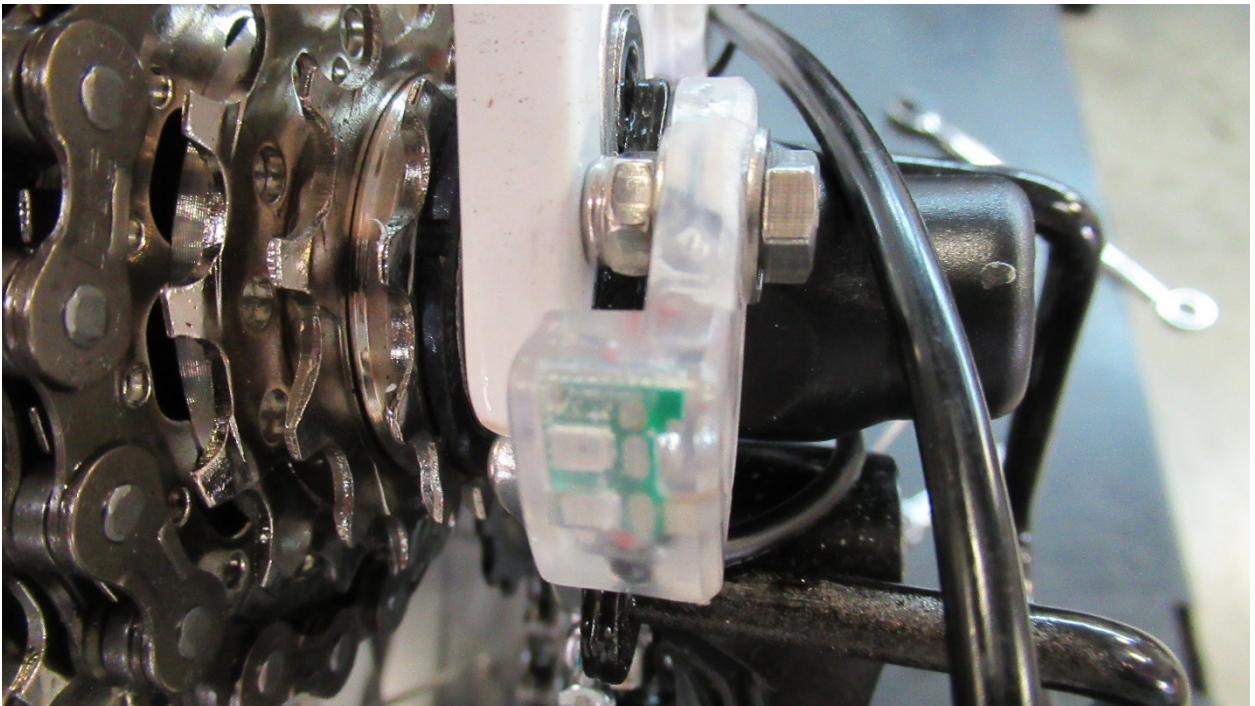

It may be necessary to gently pull a little slack from the wire for the light to reach the lower mount. Cut zip ties if necessary. Install right rear taillight assembly into lower accessory threaded mount. To prevent damaging the light, not to over tighten



With an 8mm wrench, loosely install the rack bolts with washers until all (4) bolts are installed. Shorter 5 x 10mm bolts are used on the top. Evenly tighten and readjust rack if necessary. Replace zip ties



For more information go to csc-ebikes.com or call (909) 445-0900. Also check out our tutorials on our YouTube channel at https://www.youtube.com/channel/UCgY0IAfh_RJOi1J_WzebNCQ

Ride safe and enjoy your CSC FT750