




STEEL FENDER INSTALLATION 20"FT-750



The steel fender kit comes with both front and rear fender along with all the necessary hardware for installation



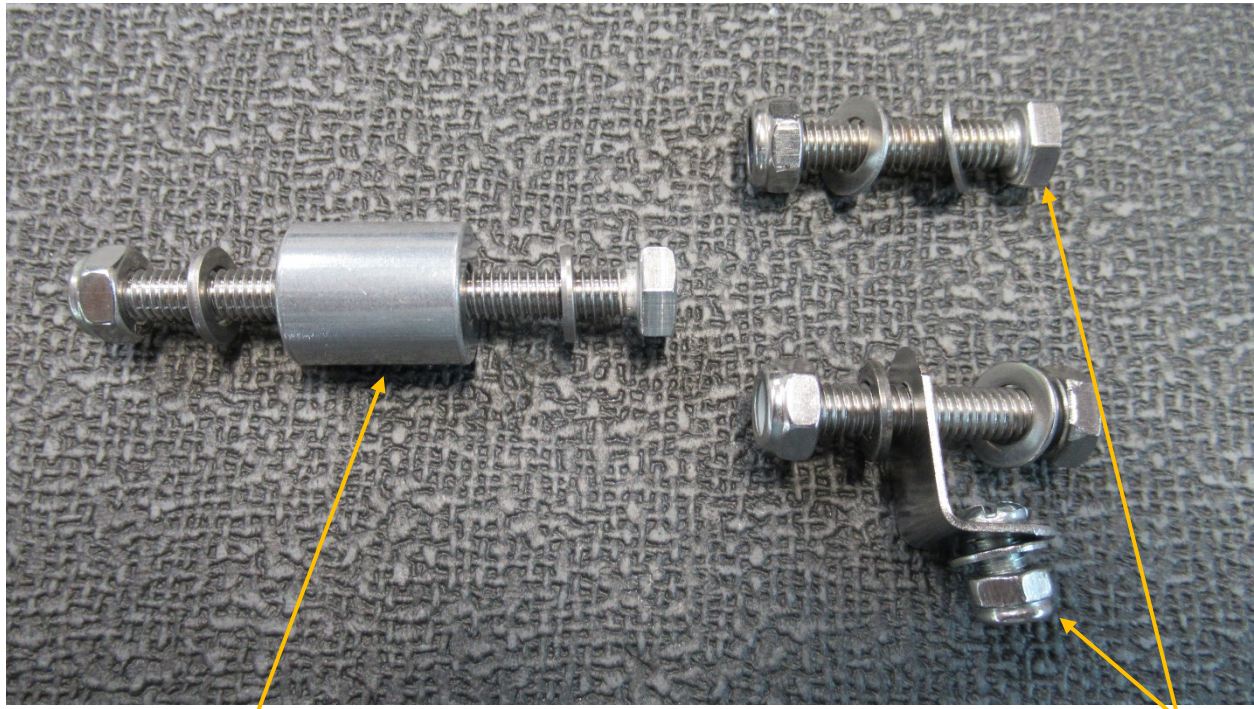

Hardware for front fender

6 x 1 x 60mm bolt, spacer, washers, nut

Hardware for rear fender

(x2) 6 x 1 x 30mm bolt, "L" bracket, 5mm screw, washers, nuts

Tools needed:

Phillips screwdriver


8mm wrench

10mm wrench

10mm socket and ratchet



The front fender only has (1) mounting point on the crown of the fork.

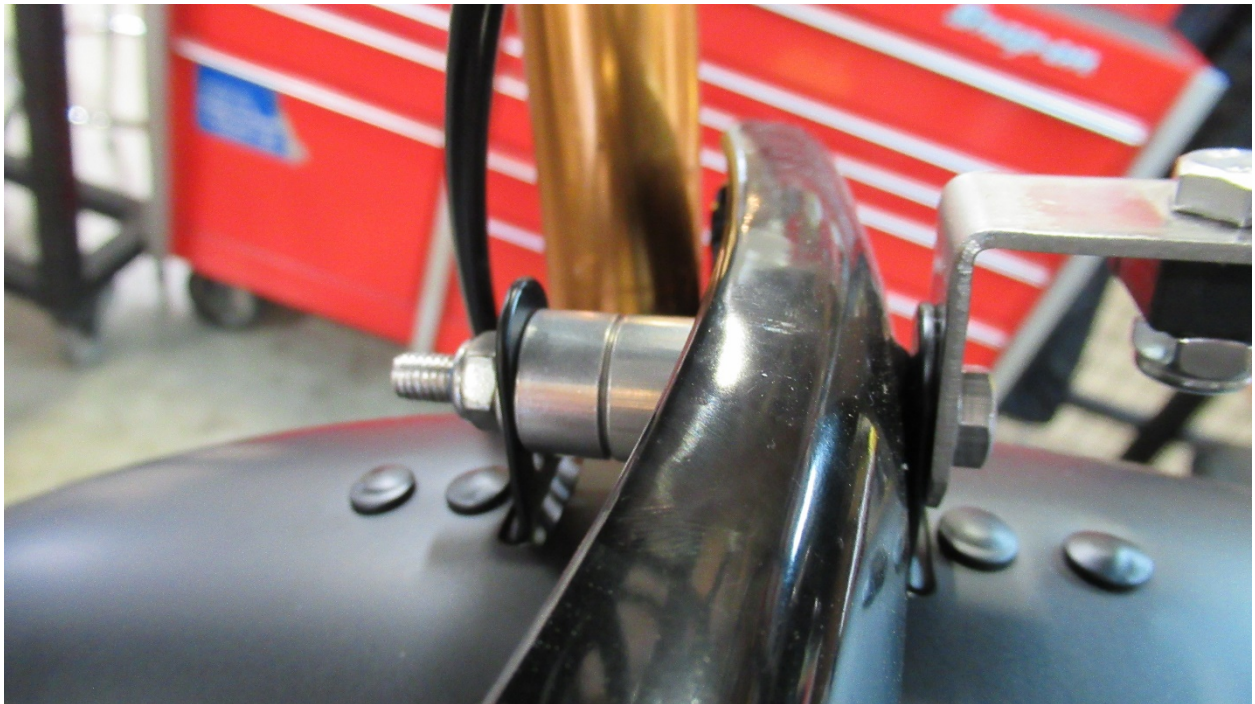

Replace the stock headlight mounting bolt with longer one supplied in the kit along with the spacers washer and locking nut



The rear fender has (2) mounting points: the crossbar on the seat stay and the crossbar on the chain stay. Use the supplied bolts washers and locking nuts



Install the "L" bracket using the 5mm screw and washer and nut, and the 6 x 30mm bolt, washer and nut through the upper seat stay crossbar



Install the 6x 30mm bolt, washer and nut through the lower chain stay crossbar.

Both front and rear fenders may require slight adjustment for tire clearance and alignment